


Assembly Instruction

Special Features:


- Length: 270, 300, 350, 400, 450, 500, 550mm.
- Exterior height of drawer side wall is 171mm.
- Full extension drawer system with loading capacity 35kg.
- Quick installation and removal of drawer.
- Two dimensional adjustment on drawer front.

Basic length	Internally usable drawer depth (NL-26)	Minimum installation depth of drawer	Minimum installation height
270mm	244mm	270mm	195mm
300mm	274mm	300mm	195mm
350mm	324mm	350mm	195mm
400mm	374mm	400mm	195mm
450mm	424mm	450mm	195mm
500mm	474mm	500mm	195mm
550mm	524mm	550mm	195mm


Inside Cabinet Dimension

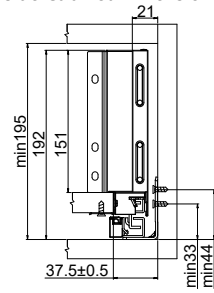


Front Panel Mounting Positions

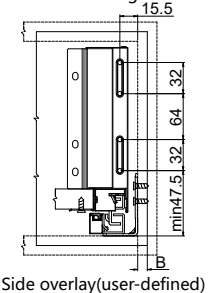


Front Fixing Brackets Positions

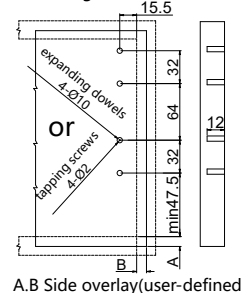


Back Panel Mounting Positions

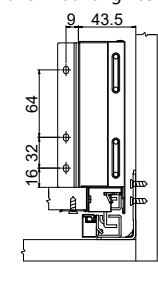

Drawer front assembly

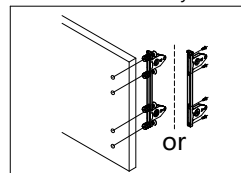


1 Install drawer front

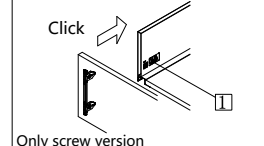


Front panel removing


1 Take out the plastic cover

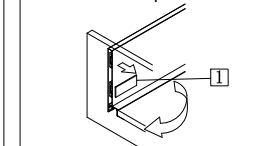



1 Loosen the fastening screws

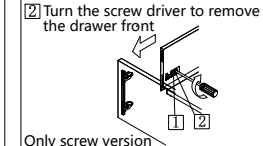


Up & down (height) adjustment: ±2mm

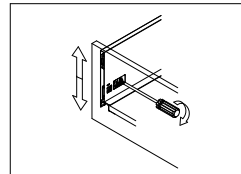


Left & right (side) adjustment: ±1mm

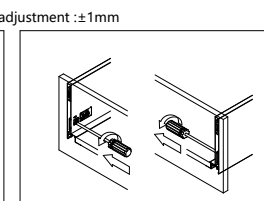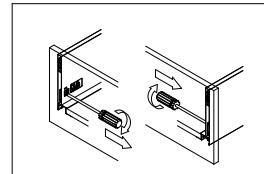


Back Adjustment

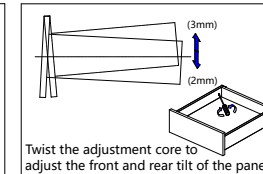


Drawer back assembly

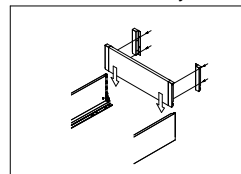



Drawer bottom assembly

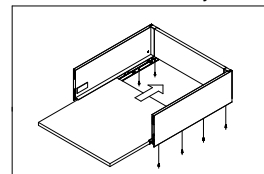


Drawer front assembly

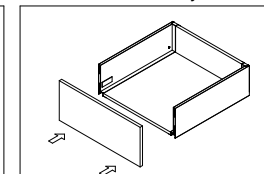

Bottom panel drilling

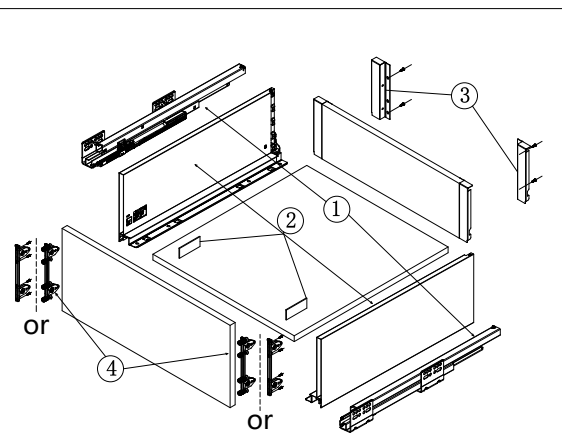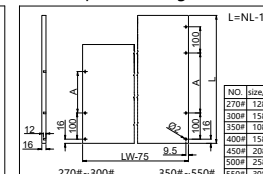


Technology pivot:
Bottom and Back Panel Measurement
16MM Density Panel

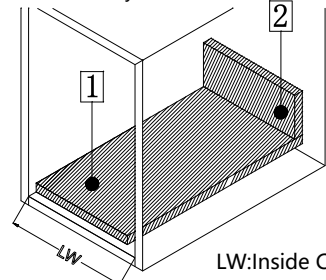

LW: Inside Cabinet Width




- Bottom panel width=Inside Cabinet Width(LW)-75±0.5
Bottom panel length=Runner length(NL)-10MM
- Back panel height=151MM
Back panel width=Inside Cabinet Width(LW)-87±0.5

Runner Installation(mm)

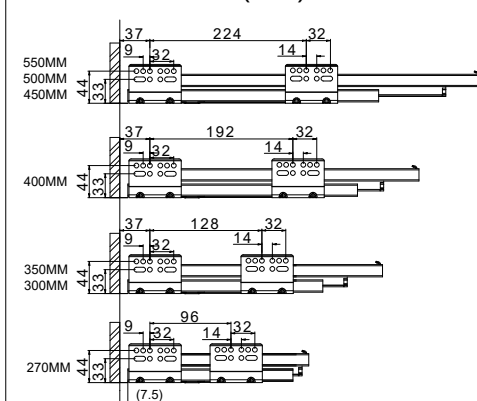


Basic length(NL): 270/300/350/400/450/500/550mm

Drawer installation

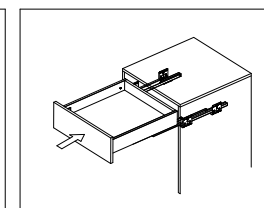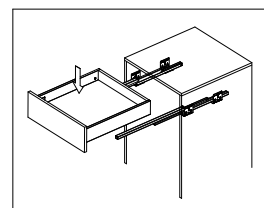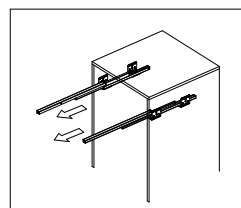

Drawer removal

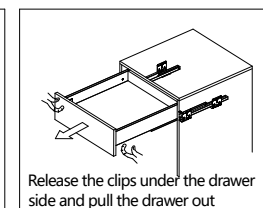

Drawer closed very silent with integrated soft close damper

